


TC2212 Combiner, hybrid-ferrite, 2 channels, dual stage isolators, 132-174 MHz

- Supports extremely close frequency spacings
- 80 dB of Tx to Tx isolation
- Permit combining two 132-174 MHz transmitters into one antenna

These transmitter combiners can be used in those systems requiring extremely close frequency separations. They utilize isolators, hybrids and terminations in a compact mechanical configuration allowing a 2-channel transmitter combiner to be mounted in only 3.5 inches of rack space. Standard configurations permit combining up to four transmitters into one antenna. For more than four transmitter, higher isolation, VSWR and power monitoring options, or unusual power requirements, consult your Sinclair applications engineers.

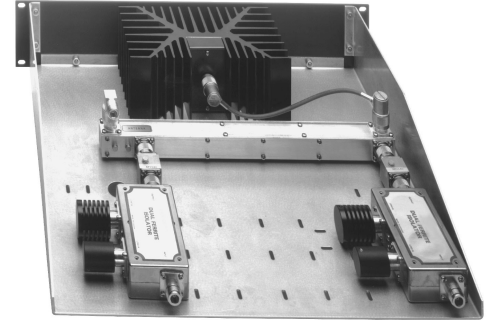

www.sinctech.com

Region	United States	Europe, Middle East and Africa	Caribbean and Latin America	Canada and rest of the world
Telephone	USA: 1 800 263 3275	International: +44 (0) 1487 84 28 19	International: +1 905 726 7676	Canada: 1 800 263 3275 International: +1 905 727 0165
E-mail	salesusa@sinctech.com	salesuk@sinctech.com	salesla@sinctech.com	salescan@sinctech.com

Electrical Specifications

Frequency Range	MHz	132 to 174
Number of channels		2
Input Connectors		N-Female
Output Connectors		N-Female
Input VSWR (max)		1.25:1
Insertion Loss (max) Tx to Ant	dB	4.3
Power (Per Channel)	W	125
Frequency separation (max)	MHz	3
Frequency separation (min)	MHz	0
Isolation Tx to Tx	dB	80
Isolation antenna to Tx	dB	53

Mechanical Specifications

Width	in (mm)	19 (483)
Depth	in (mm)	15.63 (397)
Length/ Height	in (mm)	3.5 (89)
Weight	lbs (kg)	11.6 (5.27)
Actual shipping weight	lbs (kg)	20 (9.08)
Shipping dimensions	in (mm)	19x26x7 (483x660x178)

Environmental Specifications

Temperature range	°F (°C)	-22 to +140 (-30 to +60)
-------------------	---------	--------------------------

Ordering Information

Specify one Tx frequency per channel when ordering.

Region	United States	Europe, Middle East and Africa	Caribbean and Latin America	Canada and rest of the world
Telephone	USA: 1 800 263 3275	International: +44 (0) 1487 84 28 19	International: +1 905 726 7676	Canada: 1 800 263 3275 International: +1 905 727 0165
E-mail	salesusa@sinctech.com	salesuk@sinctech.com	salesla@sinctech.com	salescan@sinctech.com