


TC3212 Hybrid-Ferrite Transmitter Combiner, 2 channel, dual stage isolators, 400-512 MHz

- Supports extremely close frequency spacings
- Permit combining two or four 400-512 MHz transmitters into one antenna
- Compact 19 inch rack mount

These transmitter combiners can be used in those systems requiring extremely close frequency separations. They utilize Sinclair manufactured isolators, hybrids, and terminations in a compact mechanical configuration allowing a 2-channel transmitter combiner to be mounted in only 3.5 inches of rack space. Standard configurations permit combining up to four transmitters into one antenna. For more than four transmitters, higher isolation, VSWR and power monitoring options, or unusual power requirements, consult your Sinclair applications engineers.

Two-channel models may be expanded to four channels by ordering a second 2-channel unit, a hybrid coupler panel and an inter-connecting cable assembly.

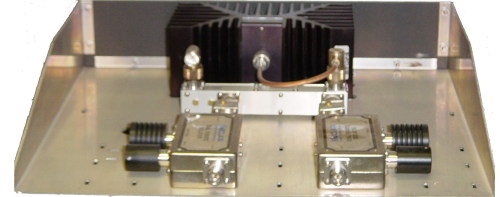

2 channel model shown

www.sinctech.com

Region	United States	Europe, Middle East and Africa	Caribbean and Latin America	Canada and rest of the world
Telephone	USA: 1 800 263 3275	International: +44 (0) 1487 84 28 19	International: +1 905 726 7676	Canada: 1 800 263 3275 International: +1 905 727 0165
E-mail	salesusa@sinctech.com	salesuk@sinctech.com	salesla@sinctech.com	salescan@sinctech.com

Electrical Specifications

Frequency Range	MHz	400 to 512
Number of channels		2
Input Connectors		N-Female
Output Connectors		N-Female
Input VSWR (max)		1.25:1
Insertion Loss (max) Tx to Ant	dB	4.2
Maximum Input Power (per channel)	W	125
Frequency separation (max)	MHz	9
Frequency separation (min)	MHz	0
Isolation Tx to Tx	dB	80
Isolation antenna to Tx	dB	53

Mechanical Specifications

Width	in (mm)	19 (483)
Depth	in (mm)	15.63 (397)
Length/ Height	in (mm)	3.5 (89)
Weight	lbs (kg)	11.6 (5.27)
Actual shipping weight	lbs (kg)	20 (9.08)
Shipping dimensions	in (mm)	19x26x7 (483x660x178)

Ordering Information

Specify one Tx frequency per channel when ordering.

Environmental Specifications

Temperature range	°F (°C)	-22 to +140 (-30 to +60)
-------------------	---------	--------------------------

Region	United States	Europe, Middle East and Africa	Caribbean and Latin America	Canada and rest of the world
Telephone	USA: 1 800 263 3275	International: +44 (0) 1487 84 28 19	International: +1 905 726 7676	Canada: 1 800 263 3275 International: +1 905 727 0165
E-mail	salesusa@sinctech.com	salesuk@sinctech.com	salesla@sinctech.com	salescan@sinctech.com